


Dolcevita above ground can be inserted in any context you like also avoiding the construction of a reinforced concrete slab using a **special modular base frame made of powder-coated steel**.

With this innovative and unique structural accessory, which can be accompanied by a mobility certificate and easy removal of the pool, you can install Dolcevita Pool in any type of situation, satisfying your every need, even the most special.


CLAY SOIL / NOT REPORTED

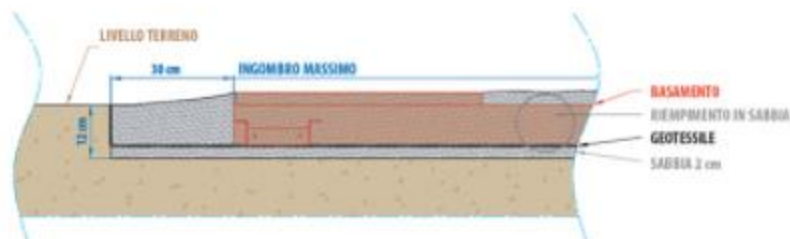

SOIL PREPARATION INSTRUCTIONS

- > Remove at least 12 cm of soil for the maximum space of the structure + 60 cm
- > Place 2 cm of sand and level the ground
- > Unfold the geotextile (400 g / m²)
- > Continue assembling the base and the structure of the pool
- > Fill completely with sand before installing a bath


SANDY GRAVEL SOIL / NOT REPORTED

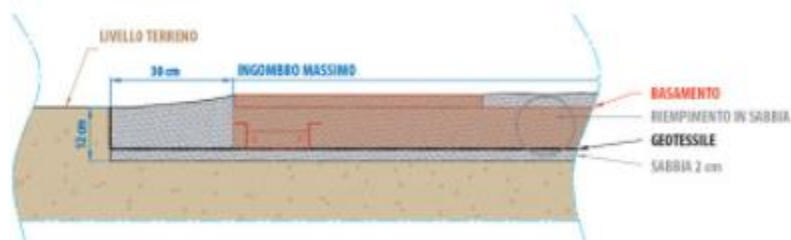

SOIL PREPARATION INSTRUCTIONS

- > Remove at least 12 cm of soil for the maximum space of the structure + 60 cm
- > Place 2 cm of sand and level the ground
- > Roll out the geotextile (400 gr / mq)
- > Continue assembling the base and the structure of the pool
- > Fill completely with sand before installing the bath


SANDY GRAVEL SOIL / NOT REPORTED

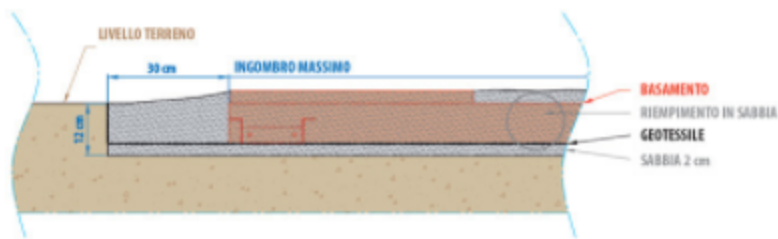

SOIL PREPARATION INSTRUCTIONS

- > Check that the quality of the soil sealing is good
- > Remove at least 12 cm of soil for the maximum space of the structure + 60 cm
- > Place 2 cm of sand and level the ground
- > Roll out the geotextile (400 gr / mq)
- > Continue assembling the base and the structure of the pool
- > Fill completely with sand before installing a bath


CLAY SOIL / NOT REPORTED

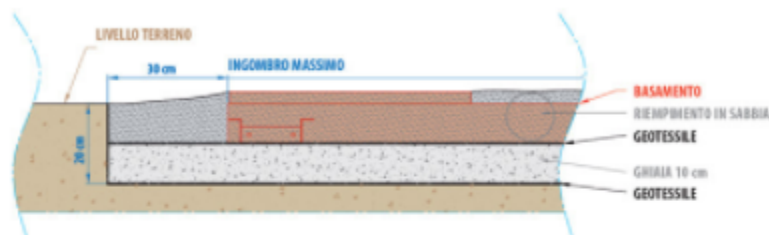

SOIL PREPARATION INSTRUCTIONS

- > Remove at least 12 cm of soil for the maximum space of the structure + 60 cm
- > Roll out the geotextile (400 gr / mq)
- > Place 10 cm of gravel (10/30 mm size), roll it and level it
- > Roll out the geotextile (400 gr / mq)
- > Continue assembling the base and the structure of the pool
- > Fill completely with sand before installing a bath

ROCKY SOIL

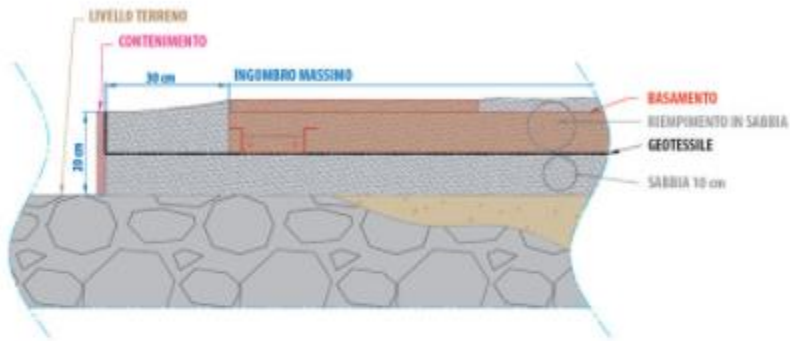

SOIL PREPARATION INSTRUCTIONS

- > Level out by removing any spikes and spurs of the rock
- > Place 10 cm of sand containing it on the sides and level it
- > Roll out the geotextile (400 gr / mq)
- > Continue assembling the base and the structure of the pool
- > Fill completely with sand before installing the bath